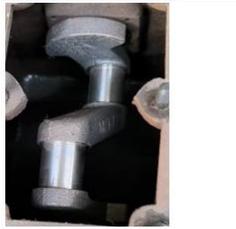


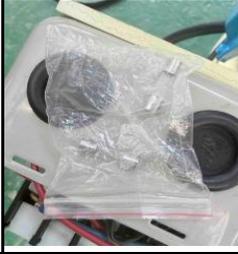
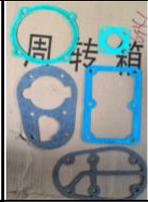
Replacement Parts for PM20 Compressor			
NO	Photo	Part Number	Item Name
1		PM20-FC001A	Single-Phase Motor 110V/60HZ
2		PM20-FC001B	Three-Phase Motor 220V/60HZ
3		PM20-FC002	Pressure Switch
4		PM20-FC003A	Magnetic Starter 110V/60HZ
5		PM20-FC003B	Magnetic Starter 220V/60HZ

6		PM20-FC004A	Solenoid valve: 110V/60HZ
7		PM20-FC004B	Solenoid Valve 220V/60HZ
8		PM20-FC005	One-Way Valve
9		PM20-FC006	Crankshaft
10		PM20-FC007	First-stage piston (including piston pin)
11		PM20-FC008	Secondary piston (including piston pin)

12		PM20-FC009	First-grade piston rings
13		PM20-FC010	Secondary piston rings
14		PM20-FC011	Air Cylinder
15		PM20-FC012	Valve Plate
16		PM20-FC013	First-stage connecting rod
17		PM20-FC014	Secondary connecting rod

18		PM20-FC015	Fore Bearing
19		PM20-FC016	Rear Bearing
20		PM20-FC017	Grease Seal
21		PM20-FC018	Pressure Gage
22		PM20-FC019	Safety Valve
23		PM20-FC020	Exhaust ball valve

24		PM20-FC021	Water Drain Valve
25		PM20-FC022	Belt
26		PM20-FC023	Oil Immersion Lens
27		PM20-FC024	Sound Suppressor
28		PM20-FC025	Air Filtration Chip
29		PM20-FC026A	Fuse: 110V/60HZ

30		PM20-FC026B	Fuse 220V/60HZ
31		PM20-FC027	Paper Gasket (5 types each set)
32		PM20-FC028	Glue