


0898-0502FL#

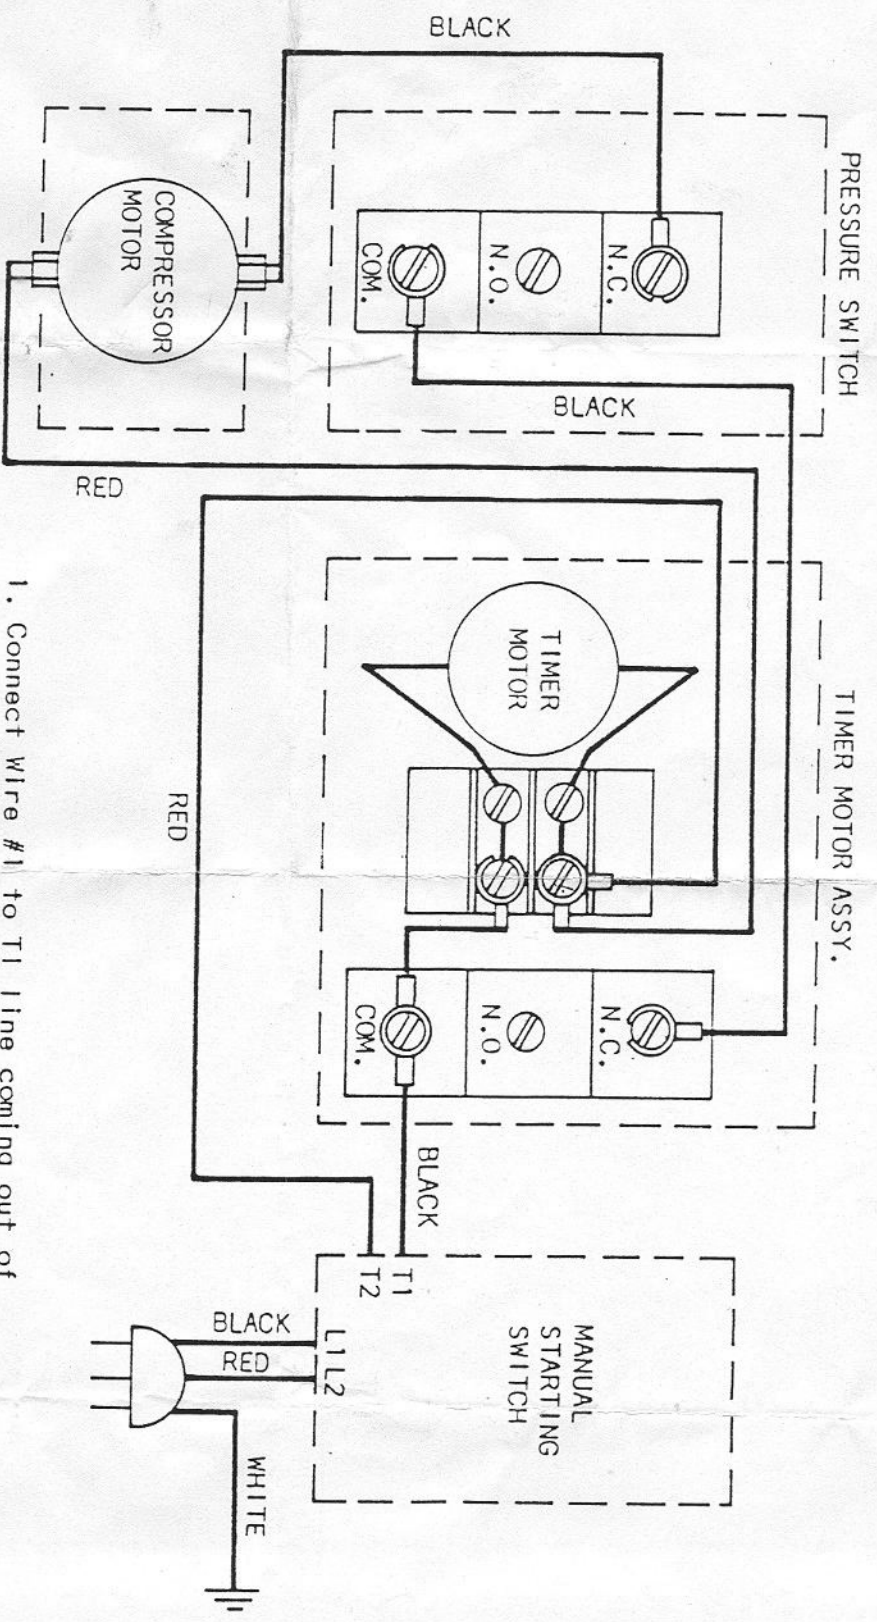

1. Connect Wire #1 to T1 line coming out of Manual Starting Switch.
2. Connect Wire #2 to Common Terminal of Pressure Switch.
3. Connect Blue Wire to Red Line from Compressor Motor and Red Line from Manual Start Switch T2 with wire nuts.

**Note:**  
 The motor supplied may be 50 or 60 cycles. Either one is acceptable. Timer "on" cycle may vary by up to 1 minute. This is normal for these timers.

**SOILMOISTURE EQUIPMENT CORP.**  
 P.O. Box 30025  
 Santa Barbara, CA 93105 U.S.A.  
 Telephone (805) 964-3525 - Fax No. (805) 683-2189

**Model 0502F3/4CR Timer Motor Wiring Diagram**

